


# Smartbright 'Tri-Colour' Batten

## BNI25

### Mounting Instruction


V1.0




Product Type	Dimension (mm)	CCT (K)	Lumen Output (lm)	Power (W)	Voltage	Frequency	kg
BNI25C LED SWT/SCCT L600 PSU AU	600x65x65	4000K/5000/6500K	1380/2000	12W/20W	220-240V~	50/60Hz	0.85
BNI25C LED SWT/SCCT L1200 PSU AU	1200x65x65	4000K/5000/6500K	2300/4000	20W/40W			1.45

#### 1. Luminaire dimension



Unit: mm

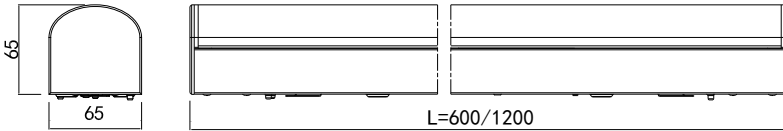

#### 2. Supply Cord

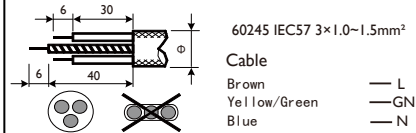


#### (A) (L600:A/B/C: Mounting distance)

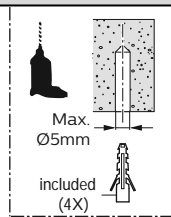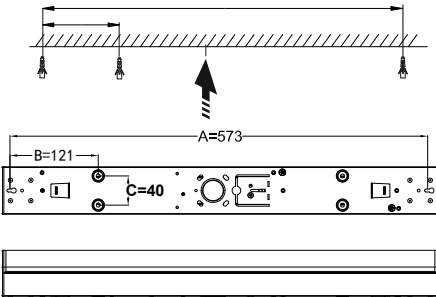


#### (B) (L1200:A/B: Mounting distance)

#### 3. Surface Mounting


Unit: mm

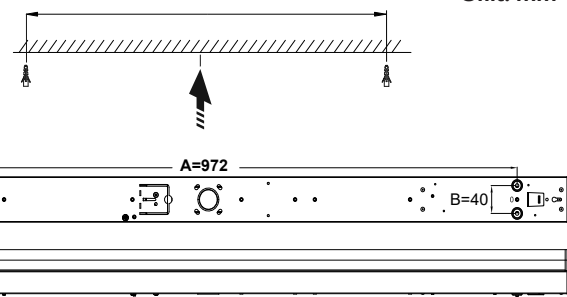


#### 4. Open the luminaire and take out the accessories bag

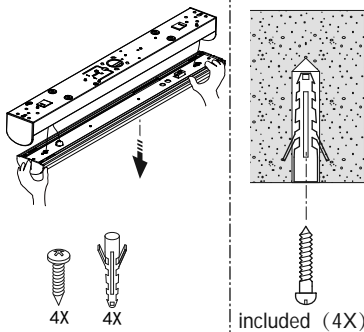


#### 5. Power supply Connection

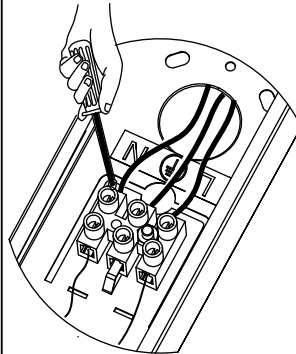

#### 6. CCT and Power regulating switch

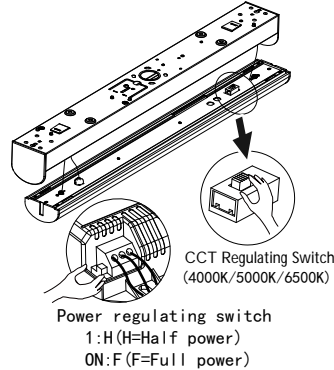

#### 7. Close the luminaire

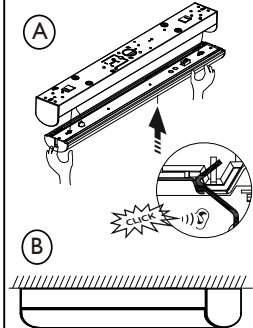

Please read this manual carefully before using the product.

- For indoor use only.
- Do not switch on before complete installation.
- The luminaire must be installed by a licensed electrician and wired in accordance with Australian wiring rules.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
- The luminaire is complied with AS/NZS 60598.
- Luminaire must not be used or stored in corrosive environment where hazardous materials such as Sulphur, Chlorine, phthalates, etc, are present.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.